



ZEBRA ZT410R PRINTER

LAN Configuration Guide

APRIL 2, 2019

Prepared By: **RYAN EGELAND** Lowry Solutions
9420 Maltby Road • Brighton, MI • 48116

Prerequisites:


- A Windows machine
- CAT 5 LAN cable

Note: you will need the assistance of IT staff to help you complete this setup

Printer installation LAN Interface

- 1) After you have the correct drivers installed you can proceed with the installation process. Under Devices & Printers you should see the ZT410R 300dpi ZPL printer driver installed.
- 2) On the Devices and Printers window click Add a printer
- 3) Click on The printer that I want isn't listed
- 4) Then Select Add a local printer or network printer with manual settings
- 5) Click on Create a new port and select ZDesigner Port Monitor from the Type of port dropdown. This will ensure the LAN port is bidirectional and will work with the Zebra Setup Utilities.
- 6) Enter the printers IP Address and click OK. There will be a momentary delay while the IP address is captured by the driver.
- 7) The next screen is critical that the correct model of printer is installed. Failure to install the correct driver will cause the entire process to fail. The correct printer model is:

ZT410R-300dpi ZPL (Reference picture below)

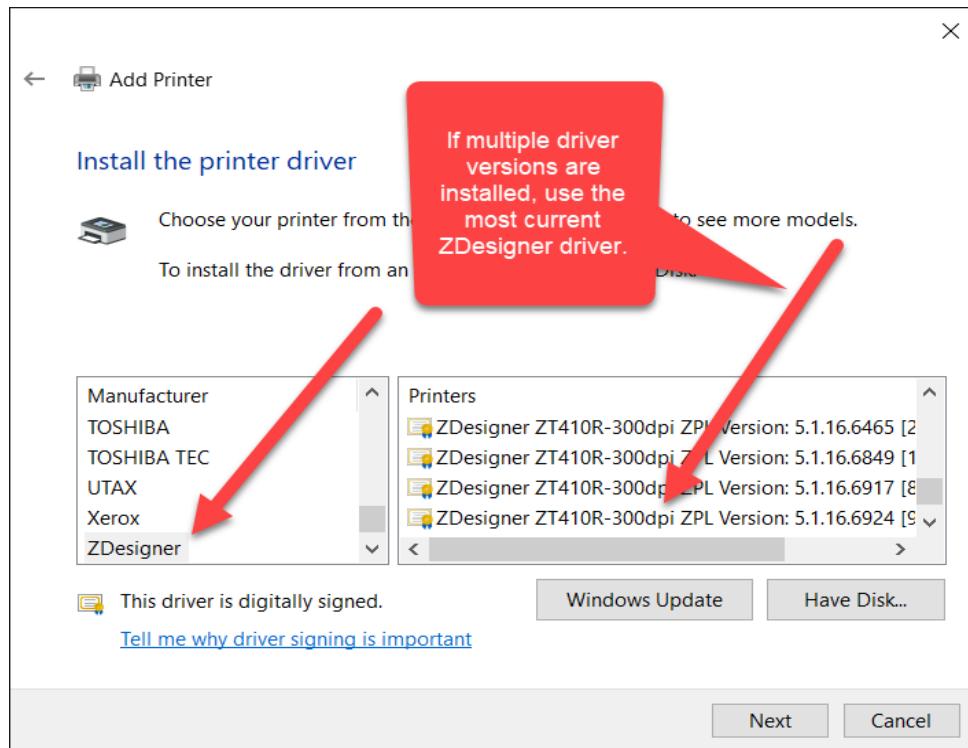

- 8) The printer name can be modified here if desired. Press Next button.
- 9) Select Use the driver that is currently installed (recommended) option and click Next.
- 10) Enter a printer network Sharename if different Ultriva users on other PC's will be also printing to this printer. This will make it easier to search for the printer and the driver.
- 11) Do **NOT** press print test page on the final screen just click finish.

Detailed ZDesigner Driver configuration Steps:

- 1) Install Driver Settings using Import function of ZDesigner Driver Properties>Advanced Tab> Printing Defaults> Import/Export Tab. Download the driver.zip file and extract its contents located here: <http://lowrysolutions.com/wp-content/uploads/IR-Comply/4X6 PINK RFID.zip>
- 2) Verify Options Tab has Stocks set to: 4X6 PINK RFID and NOT User defined.
- 3) Verify General Tab > Preferences that Stocks is set to: 4X6 PINK RFID
- 4) Click Apply and OK.
- 5) Right click on ZDesigner Driver and select Printing Preferences this time.
- 6) Confirm that Stocks is to: 4X6 PINK RFID.
- 7) Click on Advanced Setup and ensure that “Use printer settings” is checked.
- 8) Click Apply and OK to exit.

Please refer to the following link for any and all in depth documentation:

<https://lowrysolutions.com/ir-comply/>